



GROUND SAFETY RECOMMENDATION


Start Engines

For aircraft towing moving from STAND next to TWY R and S the regulation is as follows:

- ✓ Authorization for engine start shall be given once the aircraft is located on the Q point of release.
- ✓ While operating Push-Back at Release Q Point, power of only one engine on "idle" shall be authorized.
- ✓ Start-up of engines is prohibited nearby the Terminal.



Q Point allowed on TWY R and S: Q 10 (R) e Q6 (S):

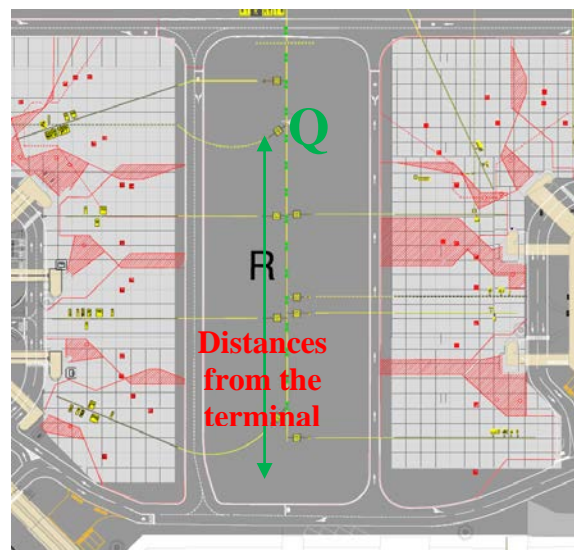

Airline Technicians or Ramp Agent are always responsible for the correct application of procedures above mentioned.

Be safe at all times!

Make sure that this Ground Safety Recommendation is clearly visible at your workplace (Safety Corner)